

Spacer AV2

For laying parquet, laminated and panel flooring without any wedges



Simply better.



Your benefits at a glance:

1 Clever dial

Set up is fast and simple. Inserted between the wall and the first row of flooring, the distance to the wall can be set simply by turning the red dial. When the installation work is finished, the spacer is easy to remove; just rotate the dial to release the pressure.

2 Wide contact and support surface

Simply put, the pressure points on the wall and the flooring are avoided. There is no danger of the aid slipping or tilting – as can happen with wedges or blocks – when working with the new BESSEY spacer.

3 Exact millimetre scale

Wall surface irregularities of 5 to 20 mm can be compensated for easily. The exact distance required for spacing can be readily seen on the millimetre scale.

4 "Robust" in the size of a business card

Manufactured from impact and break resistant, glass fibre-reinforced polyamide, the spacer is light and tough and should last for years. It is just about the size of a business card.

YouTube



Spacer AV2



Order-No.	Opening	Jaw width	Material	Adjusting range	Content per unit		
	mm	mm		mm	qty.	kg	V3
AV2	20	89	Polyamide	5 - 20	4	0.23	

- Quickly and infinitely adjustable for wall distances of 5 to 20 mm
- Spacer for floating laminate and parquet flooring installations
- Wide contact and support area for avoiding pressure points on the floorboards and plaster
- Easy to remove by simply turning back
- Very light and compact

5-20 mm
 $\frac{3}{16}$ - $\frac{13}{16}$ In.

